# **Getting started:**

# **Quick guide**



Function indication is given with different colours.



The function symbol is lit depending on the active function.

### No light

The fan is off or activated for continuous operation.

### Blue light

The fan runs due to increased

### Flashing blue light

The fan runs because it has detected that it can lower the humidity in the room.

### **Green light**

The air quality sensor has activated the fan.

### **Purple light**

The fan has been started by the airing function.

### Yellow light

The fan runs on the timer

### Flashing yellow

The delay timer counts down, faster flashes towards the end.



### Quickguide for Intellivent ICE

To access the functions that can be programmed.

First, press the function icon.



All programmable function symbols light up.








To activate the desired function, press any of the four symbols and then follow the instructions to the right.

The process is then ended by pressing the function icon (b) twice.

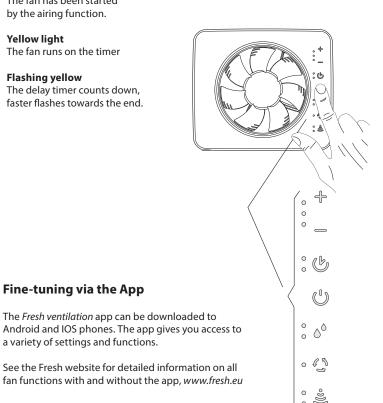



One press at a time

30 min

Activate / deactivate delayed start

Hold for 2 seconds. The lamps flash 3 times.

30 min



### Timer

Increase or decrease air flow:

Press the +/- buttons



### **Humidity control** Response indication:

The corresponding lamp lights up

Normal

 $\Diamond^{\Diamond}$ 

٥٥

Hold for 2 seconds

**Humidity control** 

response selection:

Step forward for

Normal

Slow

## **Humidity control**

Increase or decrease air flow during humidityactivated operation:

Press the +/- buttons



### Continuous operation

Activate

Press until the lamp comes on

### Continuous operation Deactivate:

Light and air quality

Activate/deactivate:

Light sensor on/off

Press repeatedly until the lamp comes on

Press until the lamp goes out

Liaht

### Continuous operation Setting the air flow: Increase or decrease

Press the +/- buttons



# Light and air quality

Indications:

The corresponding lamp lights up

sensor

sensor

Inactive



Air quality

& air quality



Air quality sensor on/off. Same as for light sensor

Air quality sensor

# Light and air quality

Setting the air flow: Increase or decrease

Select the Timer speed function, which is common for the flow with lightsensor.

Air quality function has same speed as humidity function.

Press the +/- buttons









Fine-tuning via the App

a variety of settings and functions.